



THANKS FOR PURCHASING ONE OF OUR SOUND RIGS.
IN YOUR BOX YOU WILL FIND THE BELOW



5 Button mounted glove & Board
Board foam wrap
1.5m 3.5mm Jack Aux Cable (with right angle connection)
1.5m USB to Micro USB cable

In addition, you will require:

1. Speaker with 3.5mm aux port.
2. USB Power bank (that supports low power consumption devices).



We can recommend any Anker Power bank that includes their 'trickle charge'. See QR codes below.

Secondly, we recommend using the 'right angle' end of the aux cable into the board to allow the cable to come back up your arm easily as you can see below.



The foam wrap can be used to protect the board further and if required Velcro can be attached to it to secure in place. The board will power on automatically when connected to USB power source.

Troubleshooting – If you find the unit is switching off after a short period of time (in some instances after 10 seconds) this will be down to your power bank. Many DO NOT support low power devices. The QR codes below show two we can recommend.

ANKER Ultra-Compact 5,200mAh



ANKER 323 Power bank 10,000mAh

